


# BONİTA KONSOL

KONUMLANDIRMA YAPARKEN MALZEMELERİN KODUNA VE YERİNE DİKKAT EDELİM  
LET'S PAY ATTENTION TO THE CODE AND LOCATION OF THE MATERIALS WHEN POSITIONING

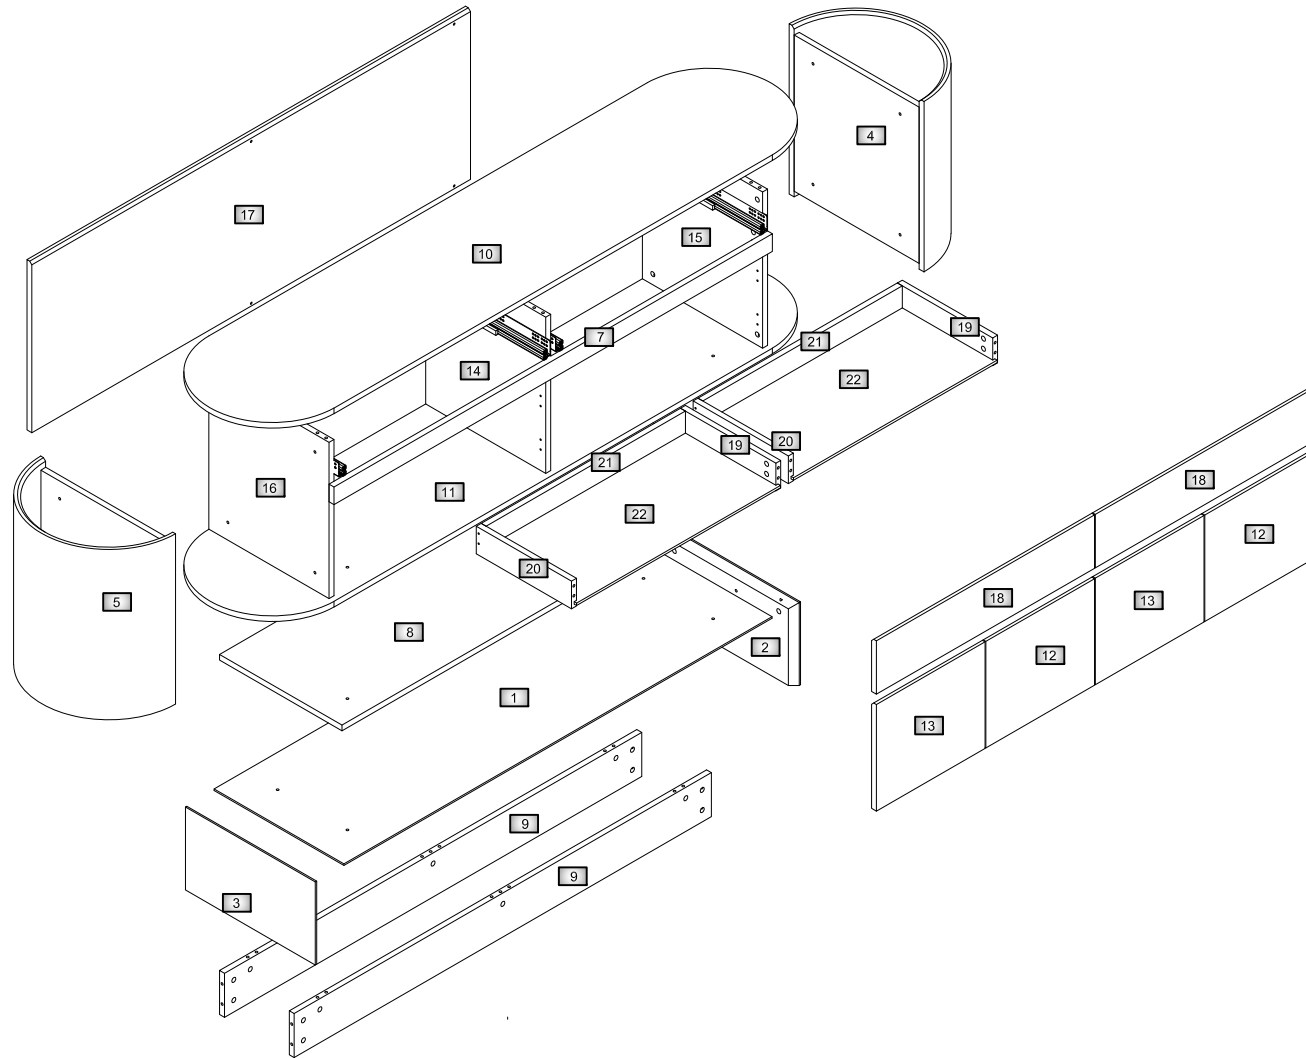

Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item	Code	Item		
A	FIX SCREW	B	FIX LOCK	C	FIX PLUG	D	Ø8mm PLS. DOWEL	E	3,5*18 CHIPBOARD SCREWS	R1	RAIL	G	KABİN SCREWS	E2	3,5*25 CHIPBOARD SCREWS	E5	3,5*50 CHIPBOARD SCREWS	H 1	YER MONTAJI	H 2	YER MONTAJI (PİVOT)	H 3	MONTAJI	H 4	MONTAJI (BİRLE)
34		46		34		24		40		2		6		6		8		2		2		2		2	
V60	M6 NUT	S 6	M6 NUT	A 45	YER MONTAJI																				
6		12		4																					

Sayın Müşteri,  
Satın aldığınız bu ürün size ulaşmadan önce tüm ürünlerimiz Test edilmiş, kontrol edilmiş ve paketlenmiştir. Ancak taşıma esnasında bazı parçalar zarar görebilir. Böyle bir durumda karşılıksız ürünün tamamını geri göndermeyin. Sadece hasarlı parçayı ve malzemeyi isteyin.

Gerekli parça ve malzemelerin kodunu kurulumda bulabilirsiniz.


Montaja başlamadan önce kutulardan çıkan ürünler eksiksiz olarak olduğundan emin olun. Birden fazla ürün satın aldıysanız montajını tamamlamadan İkinci ürünü açarak karışıklık yaratmayınız. Kurulumu başlamadan önce her parçayı hafif nemli bir bezle silin ve kurulumu başlatın. Lütfen mobilyalarınızı amacı dışında kullanmayınız.




Dear Customer,  
Before this product you have purchased reaches you, all of our has been tested and checked and packaged. However, some parts may be damaged during transportation. If you encounter such a situation, do not send the entire product back, and simply ask for the damaged part and the material.




You can find the code of the required parts and materials in the installation. Before starting the assembly, the products coming out of the boxes are complete and harmless, make sure it is. If you have purchased more than one product, without completing the assembly of a single product, Do not cause confusion by opening the second product. Before starting the installation, wipe each part with a slightly damp cloth and start the installation. You can start. Please do not use your furniture for other than its intended purpose.




PARÇA KODU	PARÇA ADI	ADET
1	ALT BLOK ÜST TABLA	1
2	ALT BLOK SAĞ YAN	1
3	ALT BLOK SOL YAN	1
4	SAĞ BOMBE	1
5	SOL BOMBE	1
6	AYNA PANO	1
7	ÇEKMECE ÖN KLAPA	1
8	ARA TABLA	1
9	ALT DESTEK	2
10	ÜST TABLA	1
11	ALT TABLA	1
12	SAĞ KAPAK	2
13	SOL KAPAK	2
14	DİKORTA	1
15	SAĞ YAN TABLA	1
16	SOL YAN TABLA	1
17	ARKA PANO	1
18	ÇEKMECE ÖN	2
19	SAĞ ÇEKMECE YAN	2
20	SOL ÇEKMECE YAN	2
21	ÇEKMECE ARKA	2
22	ÇEKMECE DİP	2




DETAYLI KURULAMA KODU OKUTUNUZ / READ THE DETAILED DRYING CODE  
Yedek parça ihtiyacınız olması durumunda lütfen montaj talimatlarında gösterilen "Model Kodu" ve "Aksesuar Kodu"nu belirtiniz.  
In case you need a sparepart, please indicate "Model Code" and "Accessory Code" shown in the assembly instructions.




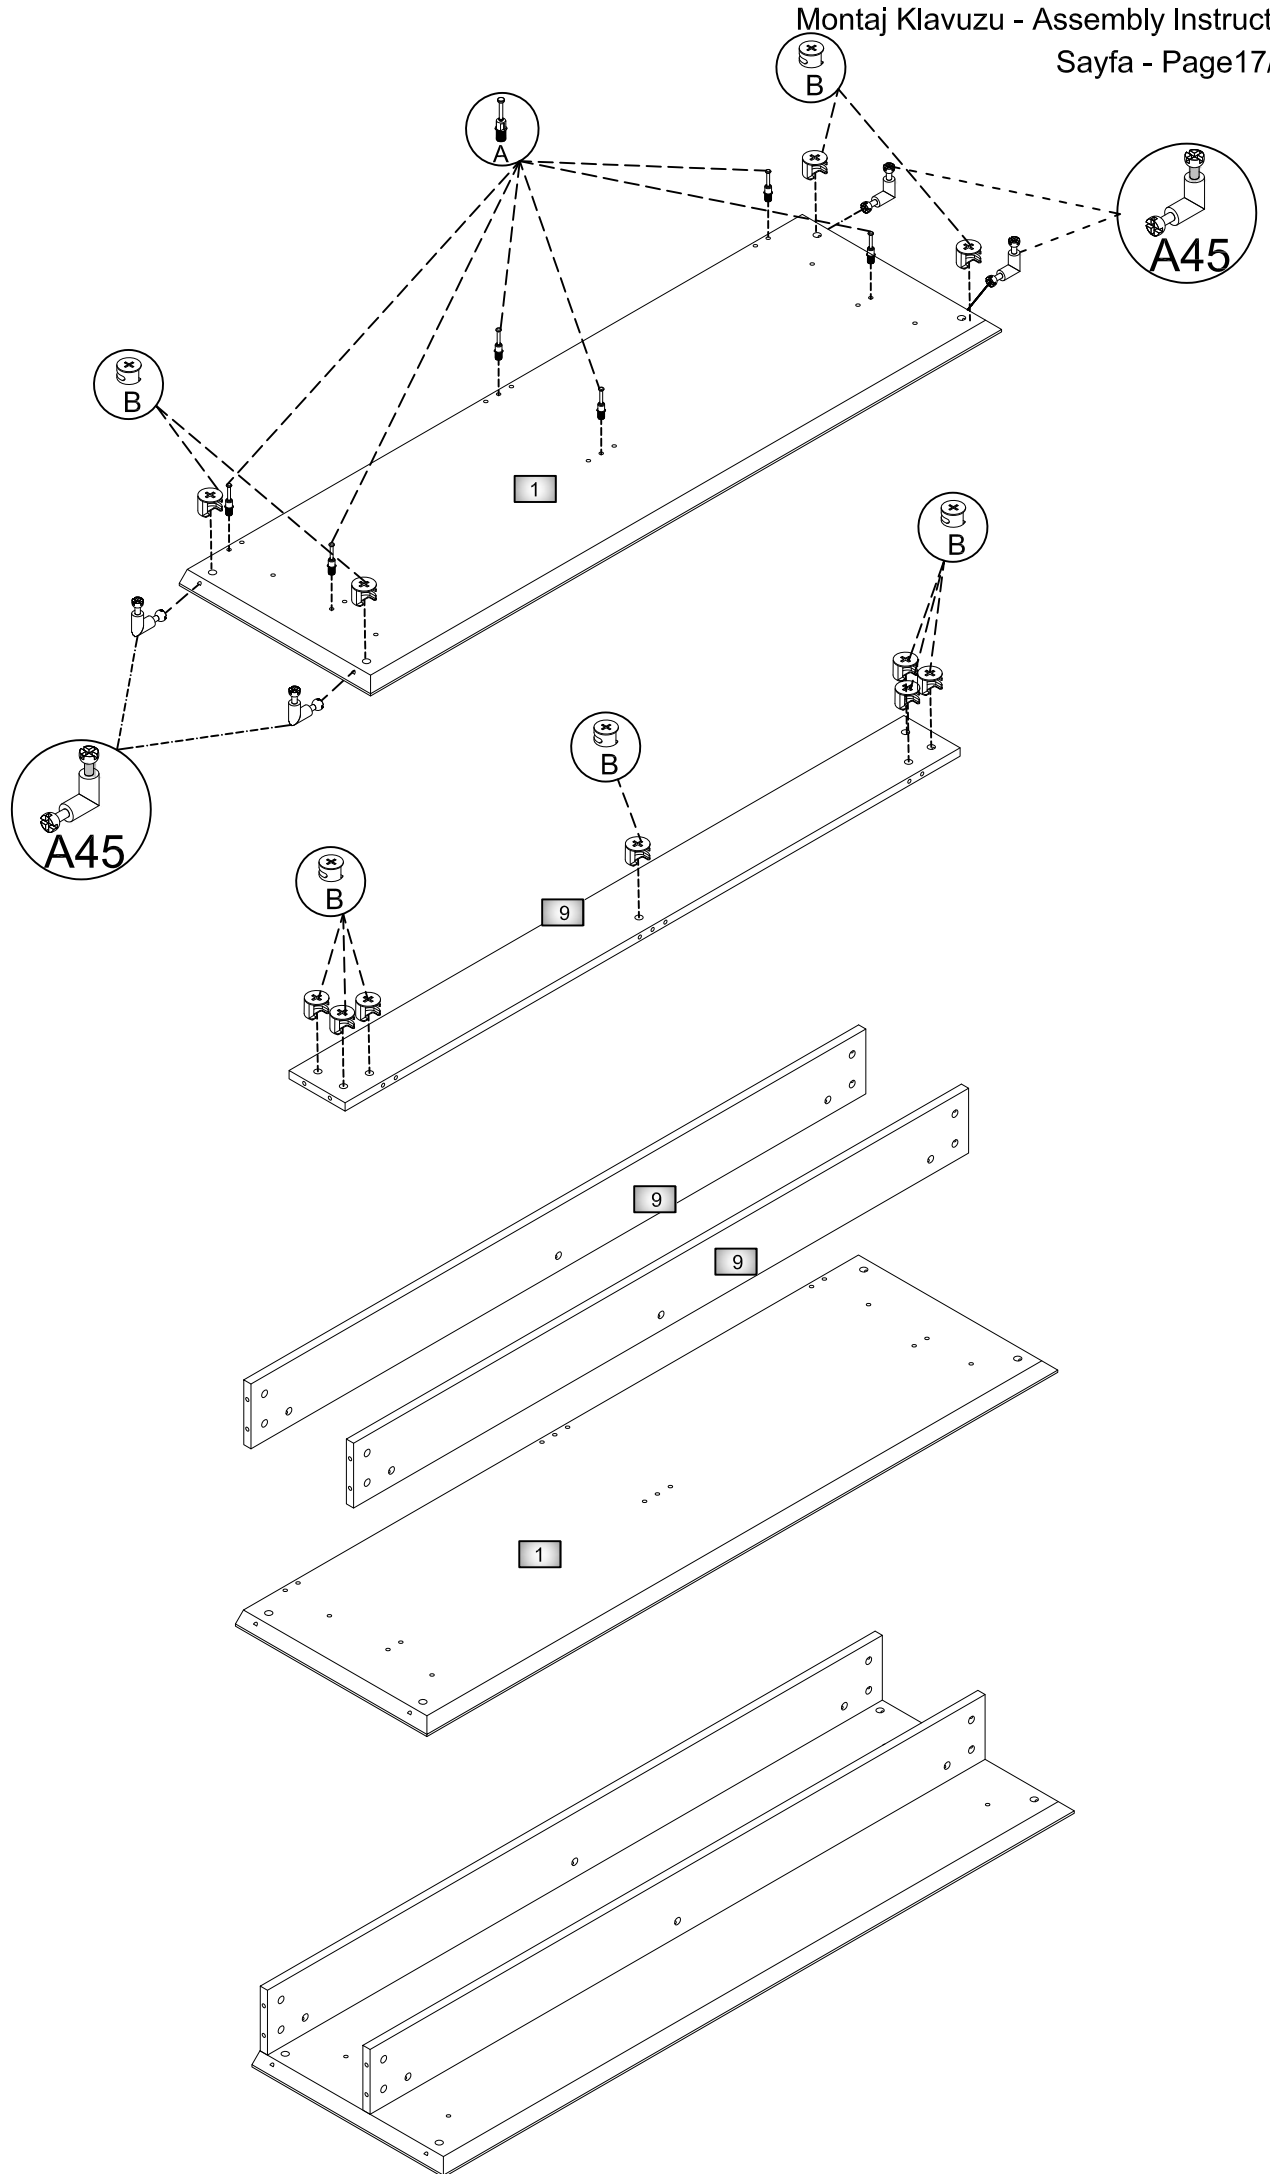


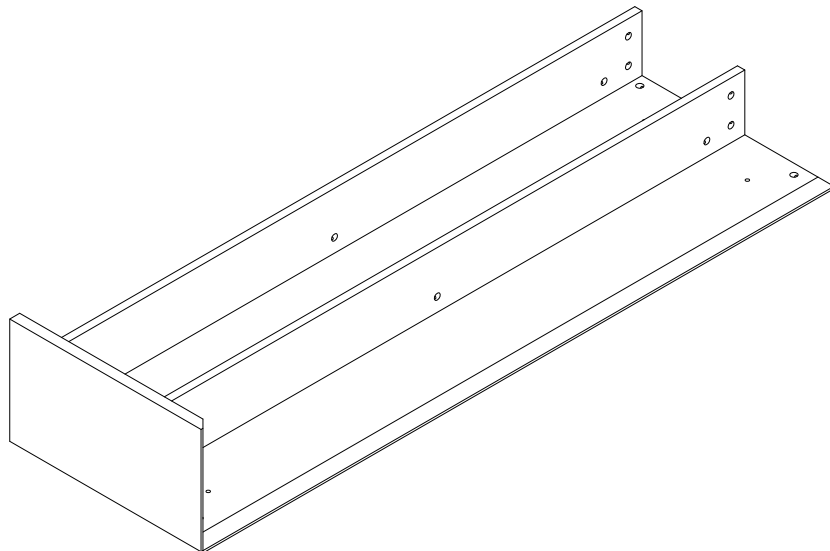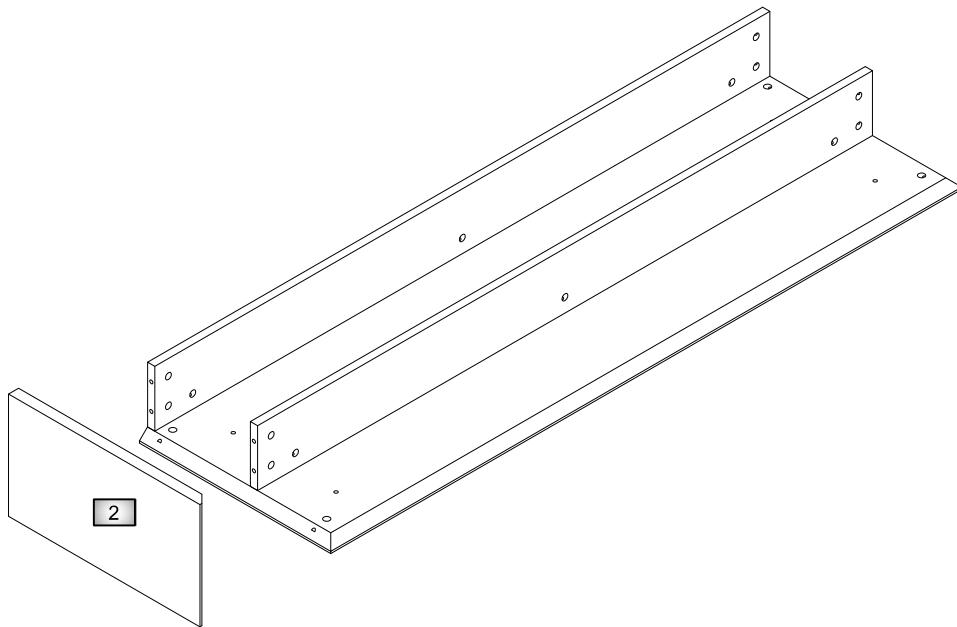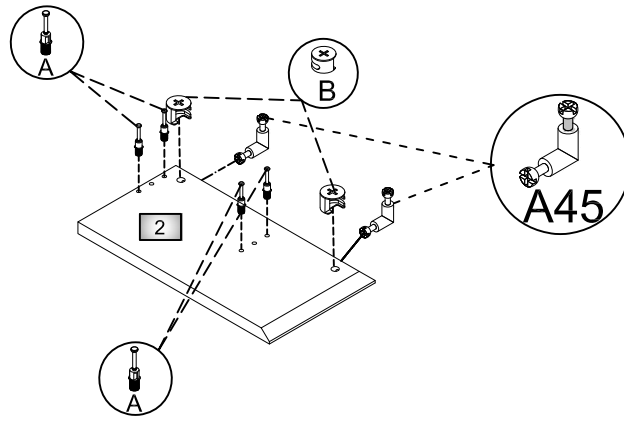


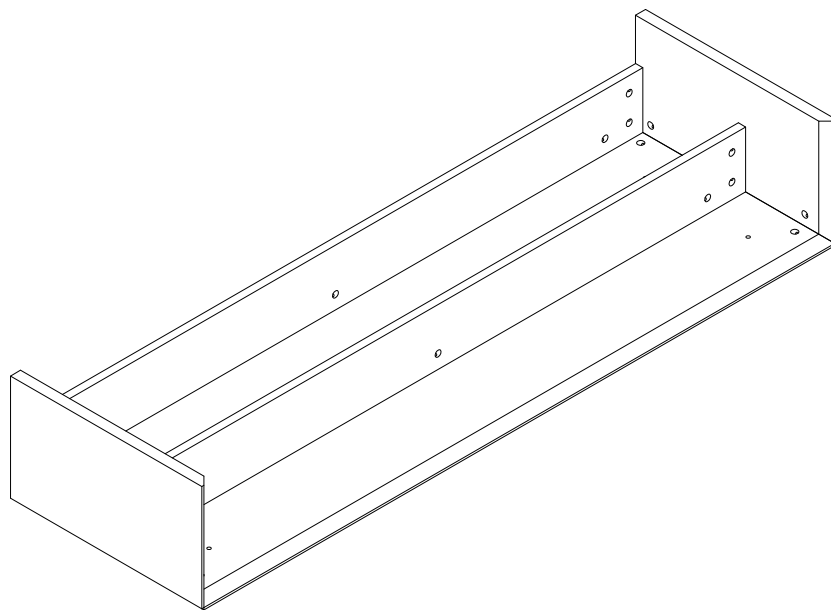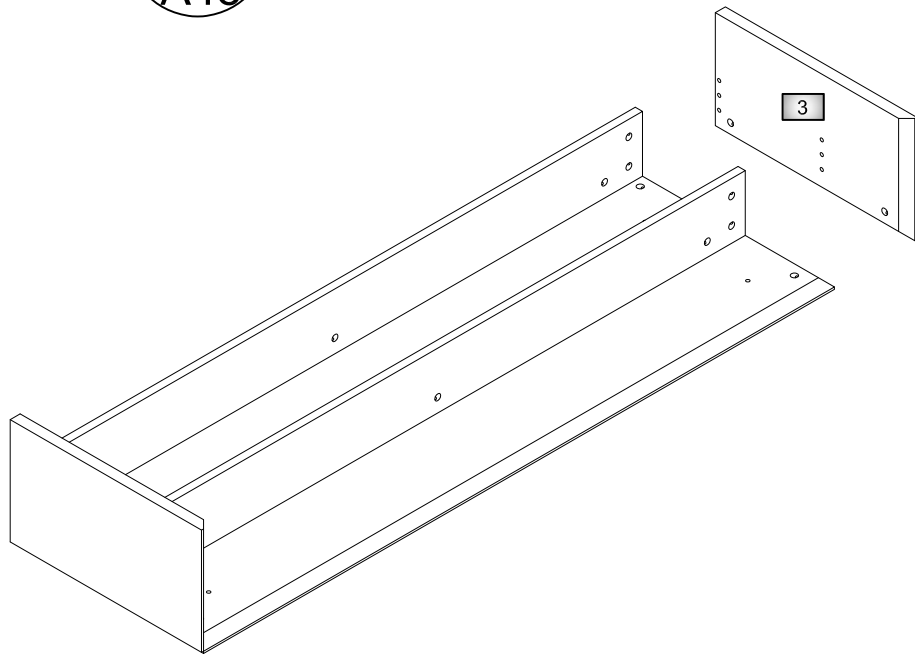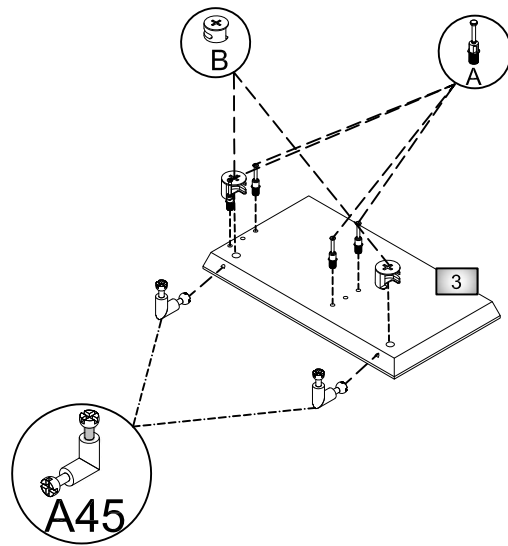


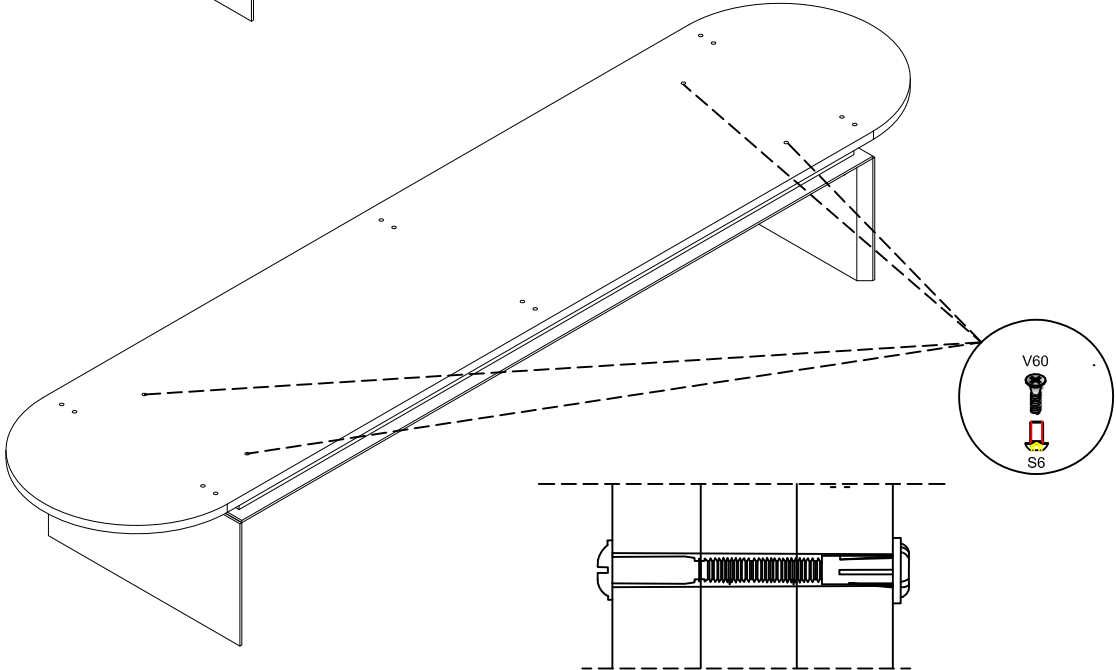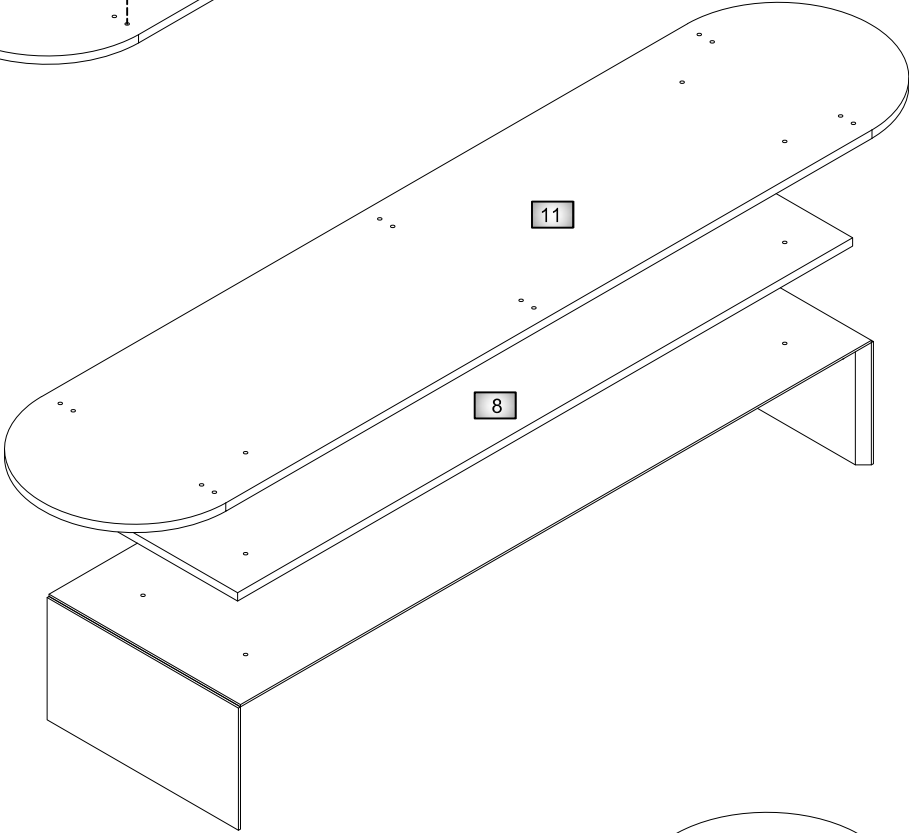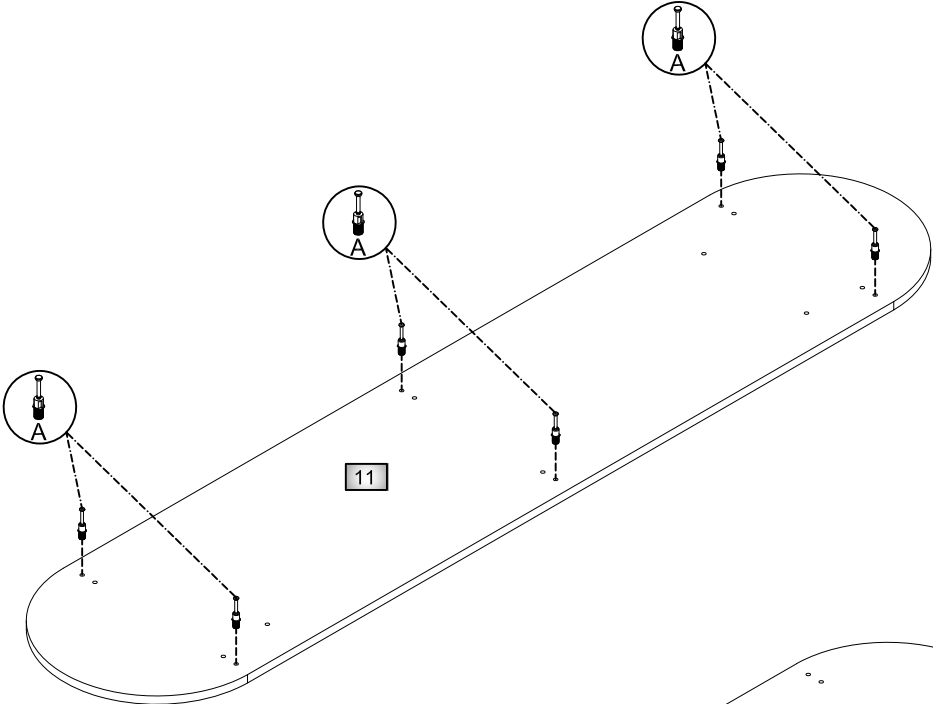

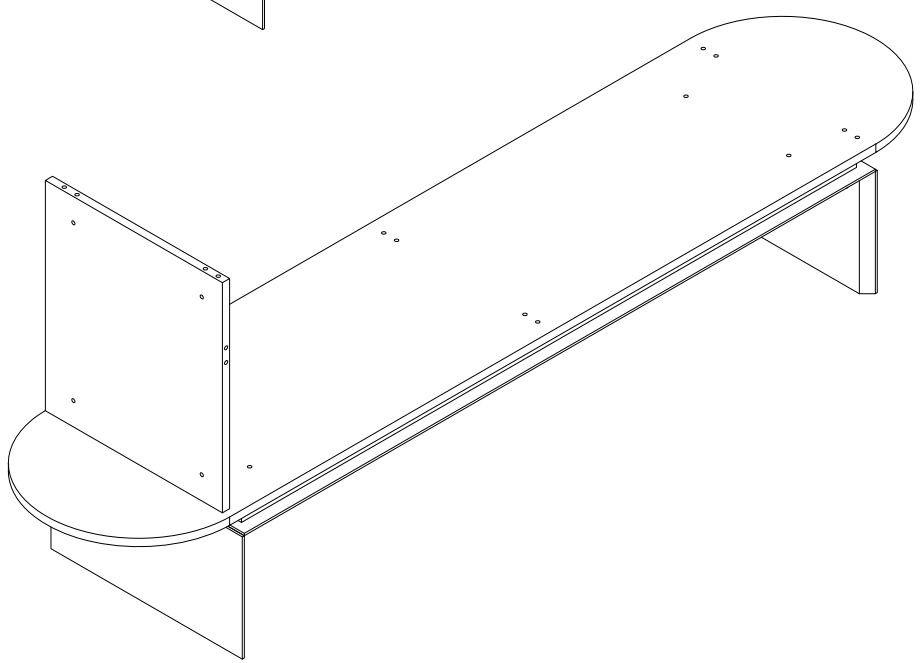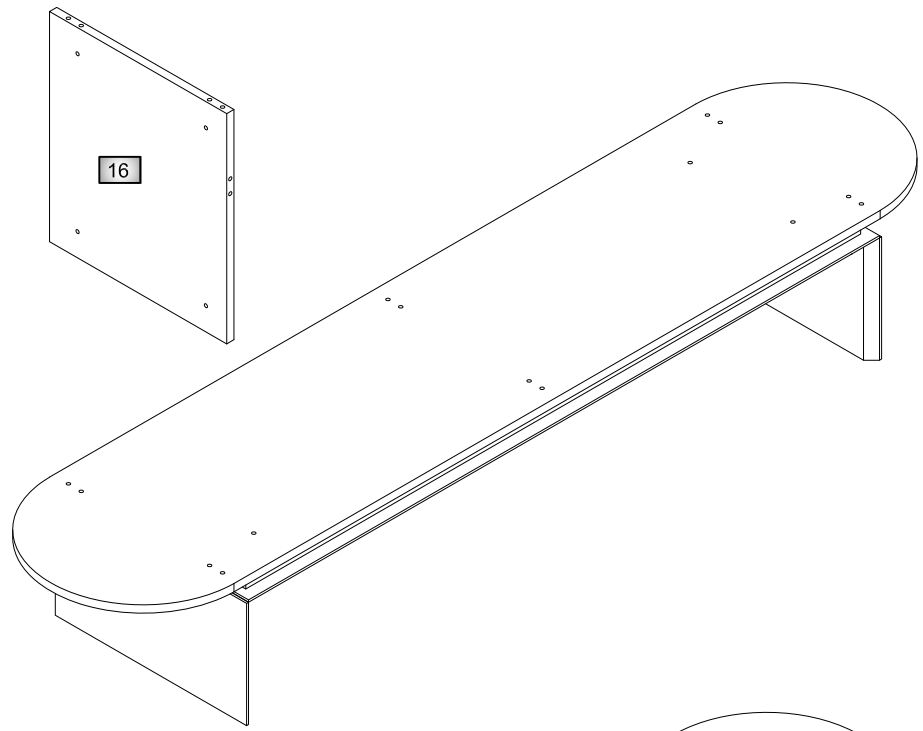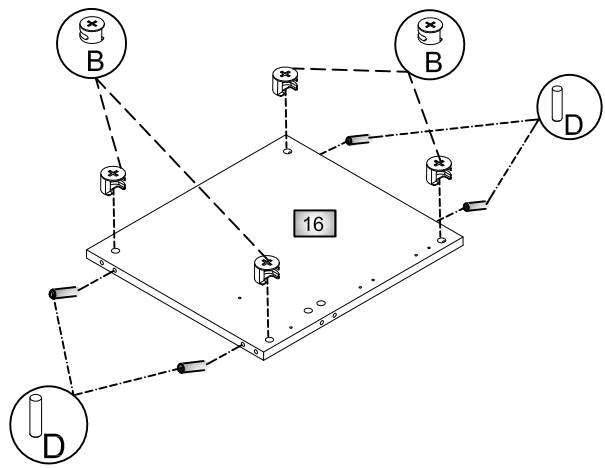

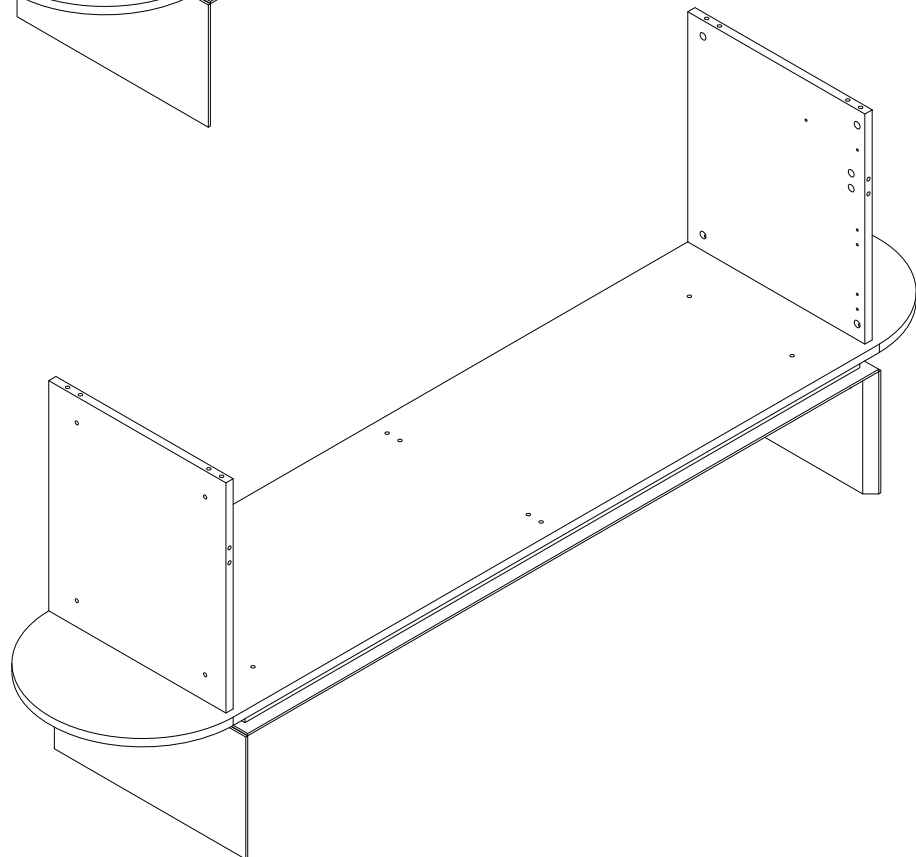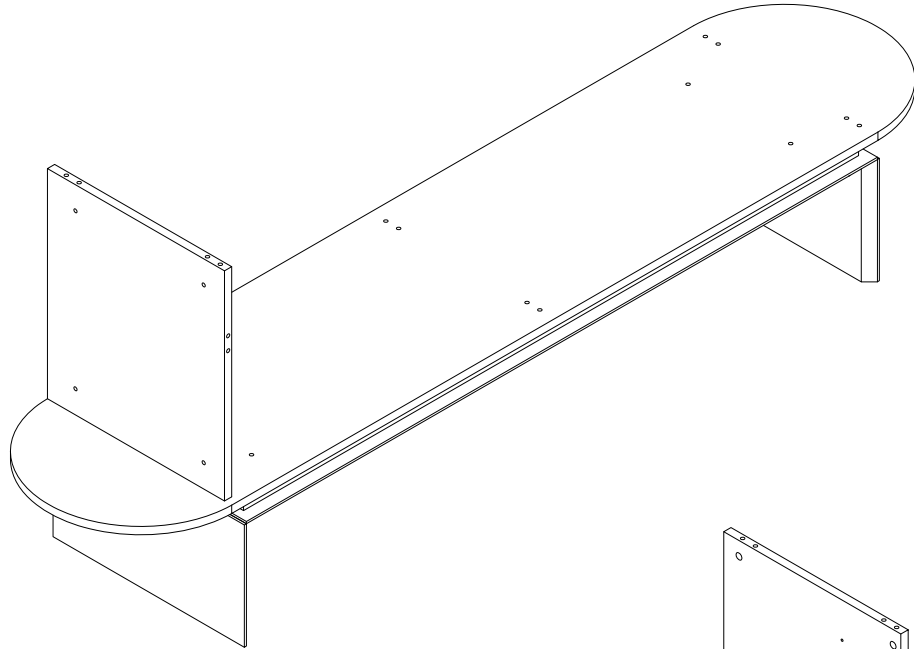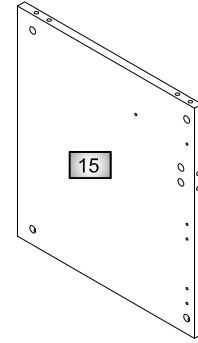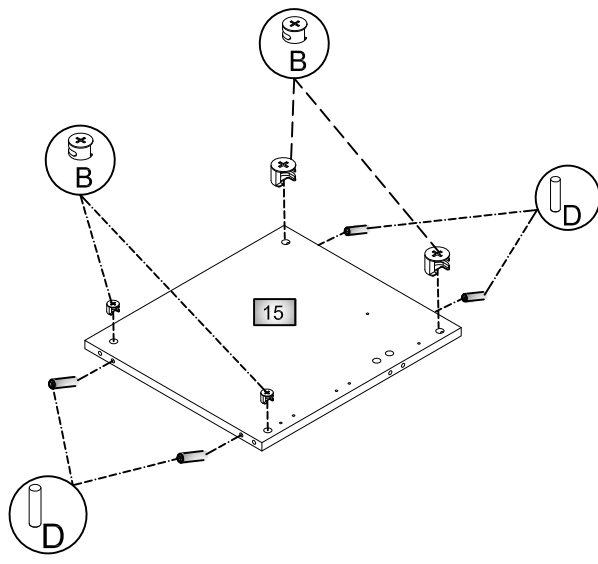

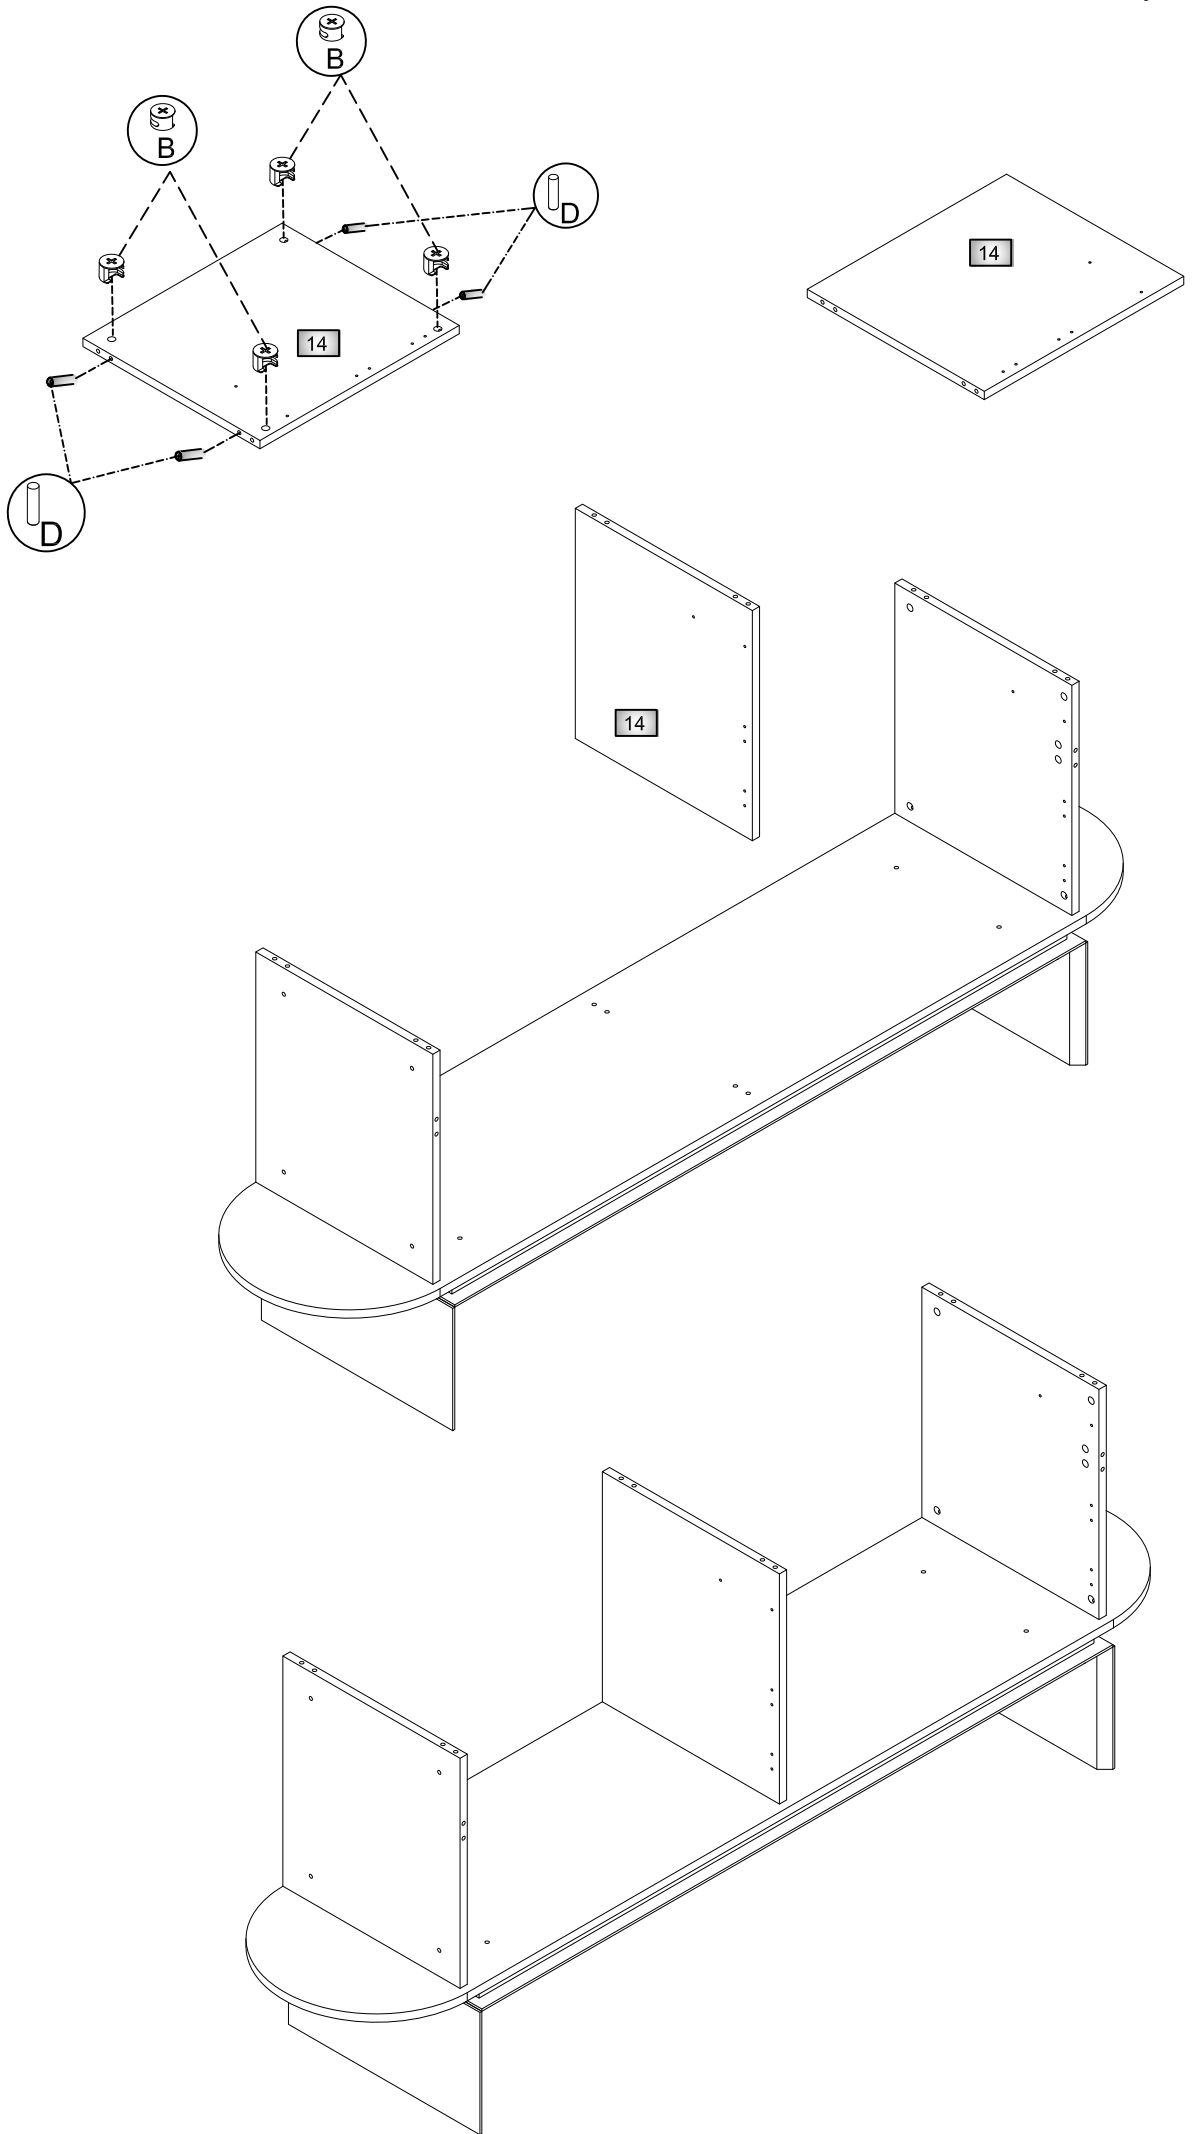

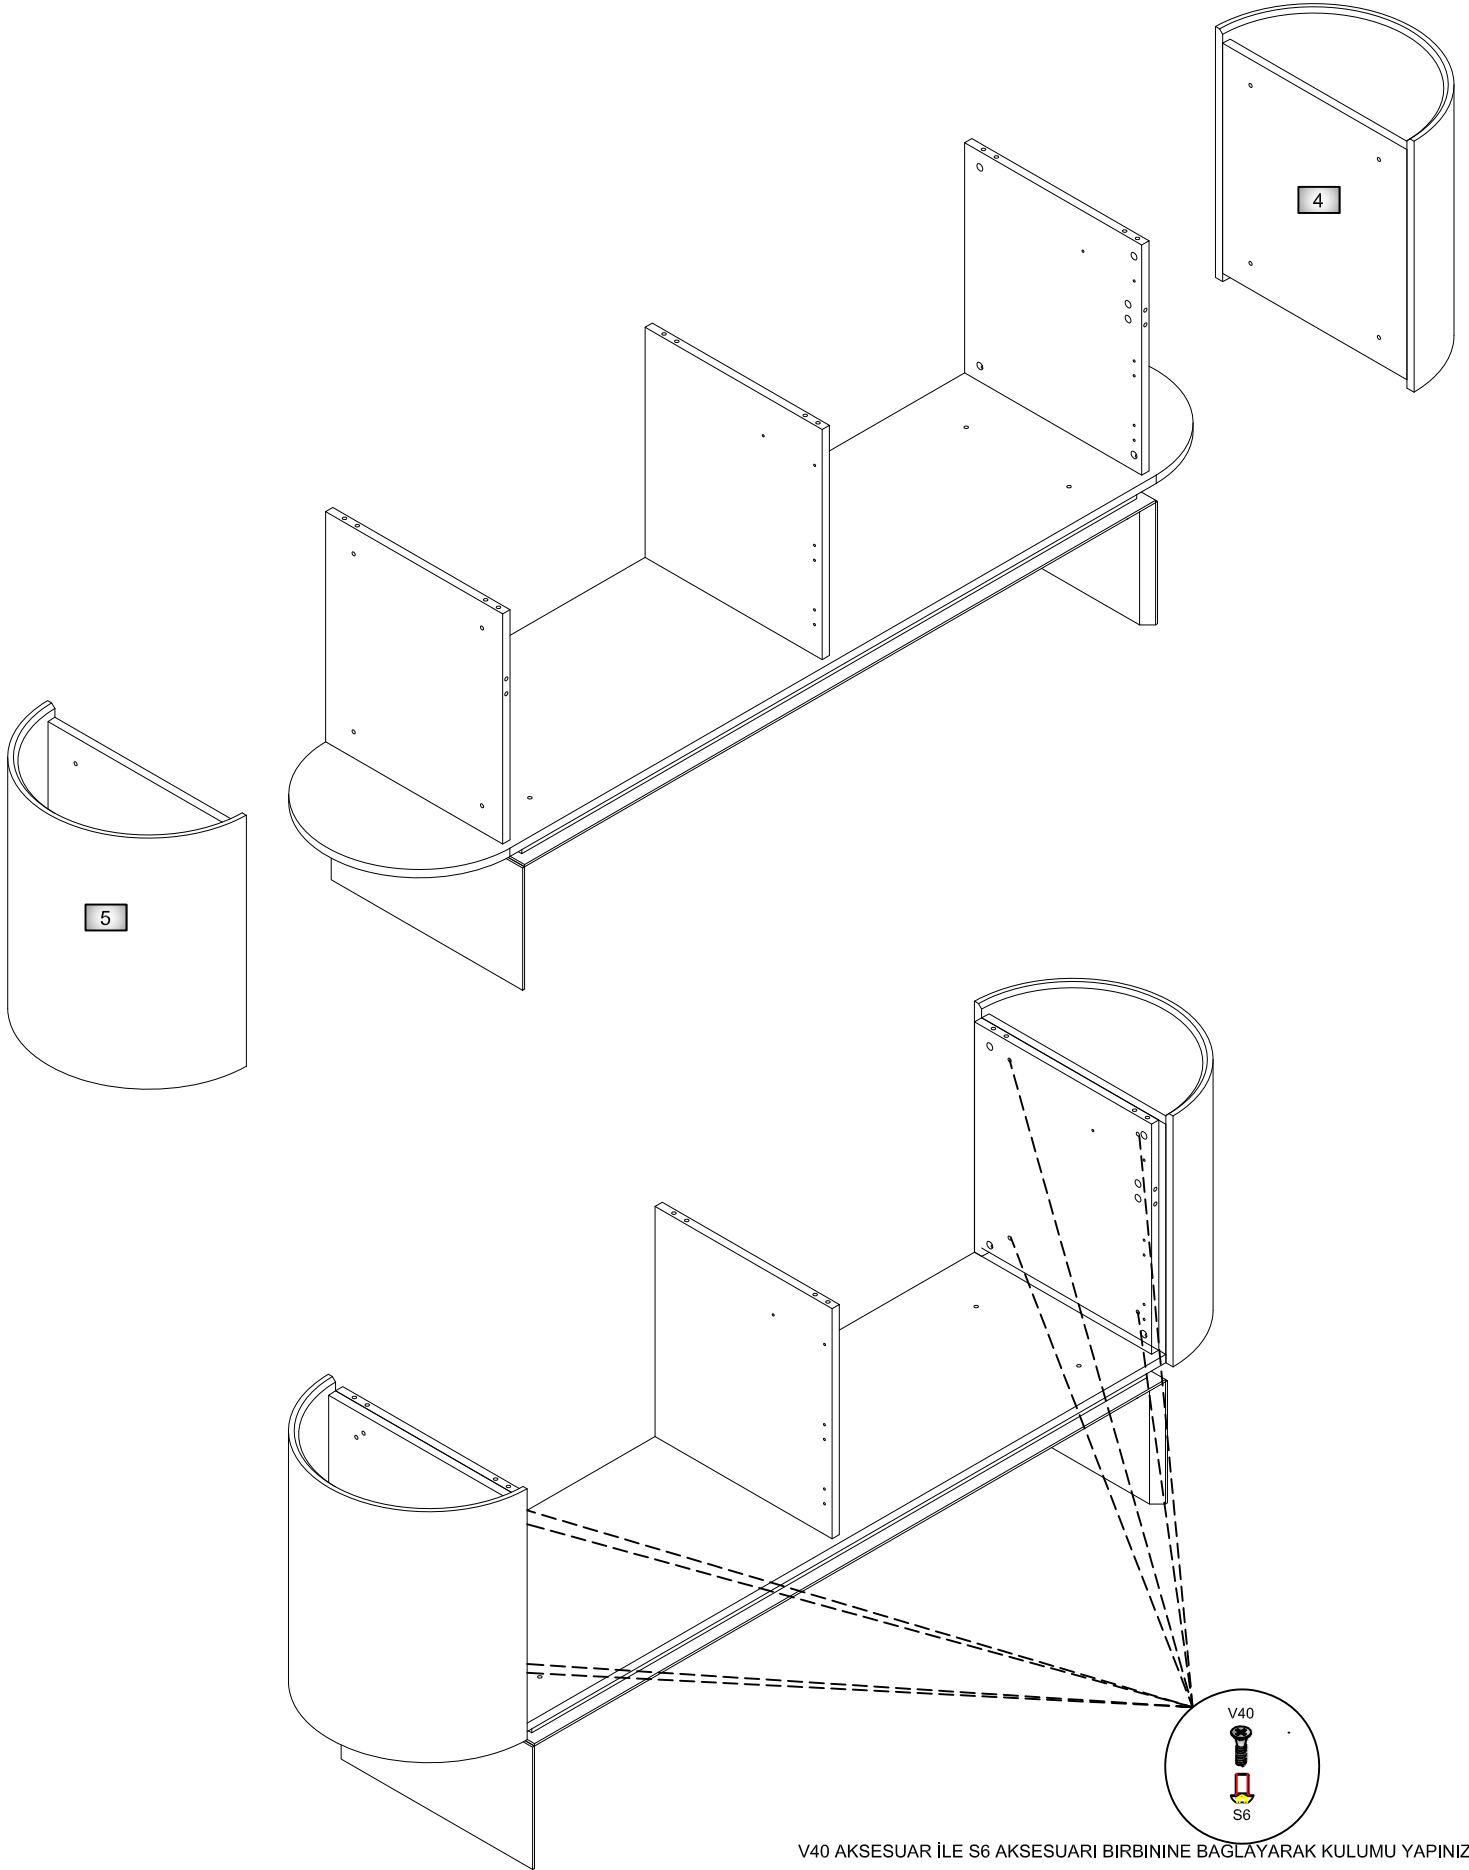

V40 AKSESUAR İLE S6 AKSESUARI BİRBINİNE BAĞLAYARAK KULUMU YAPINIZ

